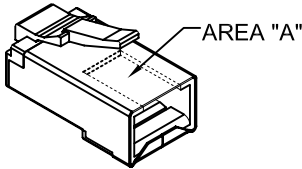



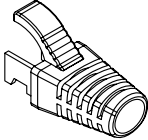
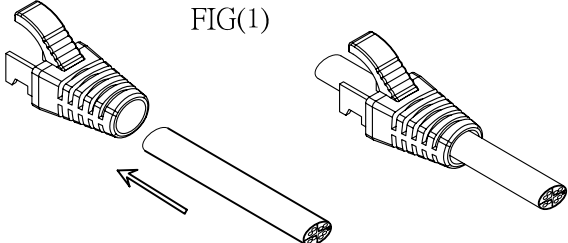
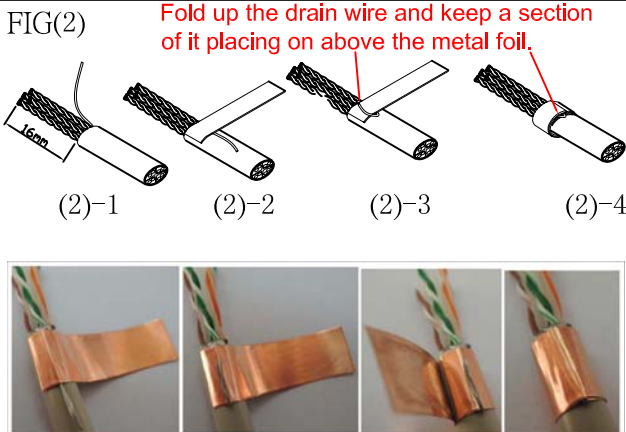
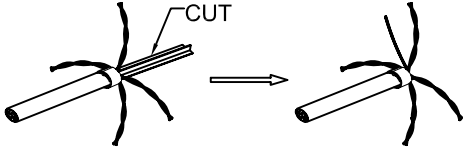
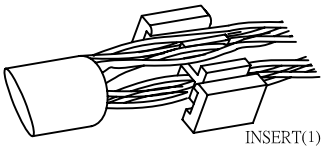
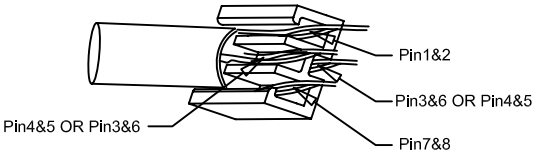
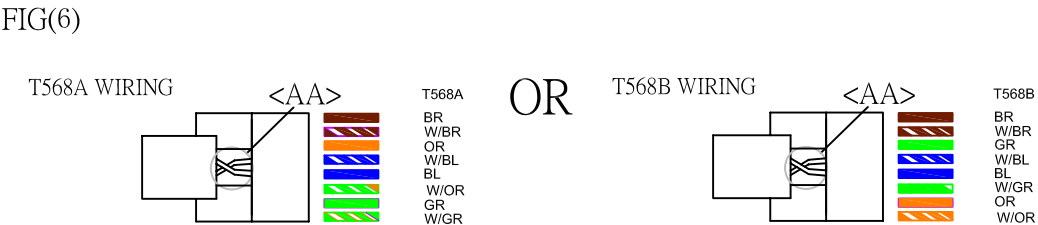


# ASSEMBLY INSTRUCTION

1/2

FOR 4 PART PLUG (T568A & T568B WIRING)

A1 2014-12-10

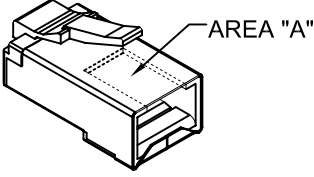



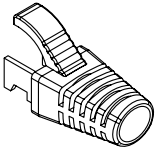
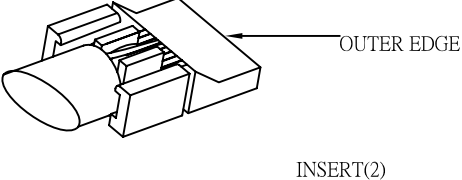
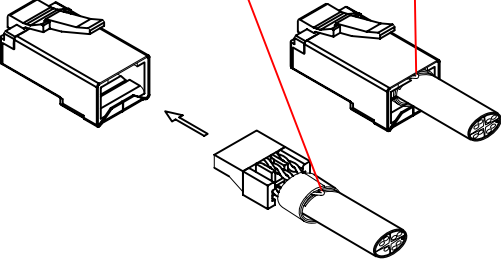
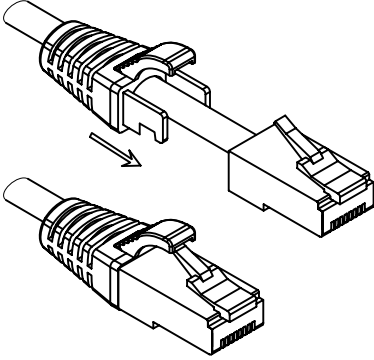
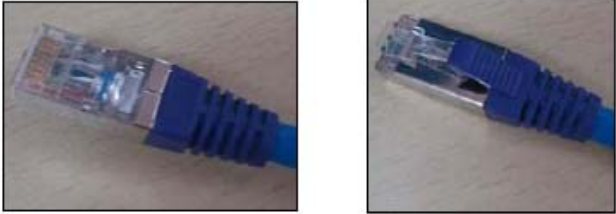
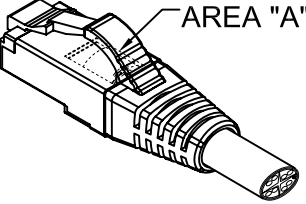

	PLUG MAIN BODY	INSERT(1)	INSERT(2)	Aluminium FOIL	Boot
					
STEPS	FIGURES				IMPORTANT POINTS
1.PASS THROUGH BOOT					<p>PUSH CABLE INTO THE BOOT AS SHOWN FIG(1)</p>
2.SURROUND THE DRAIN WIRE WITH Aluminium FOIL					<p>STRIP OUT CABLE JACKET WITH A LENGTH OF 16mm .</p> <p>ROLL THE Aluminium FOIL AND DRAIN WIRE ON THE CABLE JACKET AS PER FIG(2)-1~FIG(2)-4</p>
3.CUT PARTITION					<p>CUT OUT THE PARTITION TO THE EDGE OF THE CABLE JACKET</p>
4.PLACE PAIRS IN INSERT(1)					<p>PLACE THE 4 PAIRS IN THE SLOTS OF INSERT (1) AS SHOWN IN FIG (4)</p>
5.WIRE POSITION					
6.UNTWIST AND STRAIGHTEN WIRES					<p>UNTWIST THEN STRAIGHTEN THE CORES &amp; PRESENT THEM IN THE CORRECT ORDER FOR T568A or T568B</p>

# ASSEMBLY INSTRUCTION

2/2

FOR 4 PART PLUG (T568A & T568B WIRING)

A1 2014-12-10

PLUG MAIN BODY	INSERT(1)	INSERT(2)	Aluminium FOIL	Boot
				
STEPS	FIGURES		IMPORTANT POINTS	
<p>7. CUT OFF EXCESS WIRES</p>	<p>FIG(7)</p> 		<p>CUT OFF EXCESS WIRES ALONG THE OUTER EDGE OF INSERT (2)</p>	
<p>8. PUSH INTO PLUG MAIN BODY</p>	<p>FIG(8)</p> <p>Put the drain wire in this position(On the top)</p> 		<p>PUSH THE ASSEMBLY INTO THE PLUG AND PUSH THE ASSEMBLY TO THE VERY END OF THE PLUG</p>	
<p>9. PUSH BOOT BACK INTO PLUG BODY</p>	<p>FIG(9)</p> 		<p>PUSH THE BOOT INTO THE PLUG AS SHOWN FIG(9)</p>	
<p>10. CRIMPING OF THE PLUG</p>	 <p>Put the drain wire in this position</p>  		<p>CRIMPING OF THE PLUG</p> <p>AFTER CRIMPING,THE DRAIN WIRE AND Aluminium FOIL CONTACTED THE METAL SHIELDING AT AREA "A"</p> <p>ASSEMBLY COMPLETED</p>	